
1

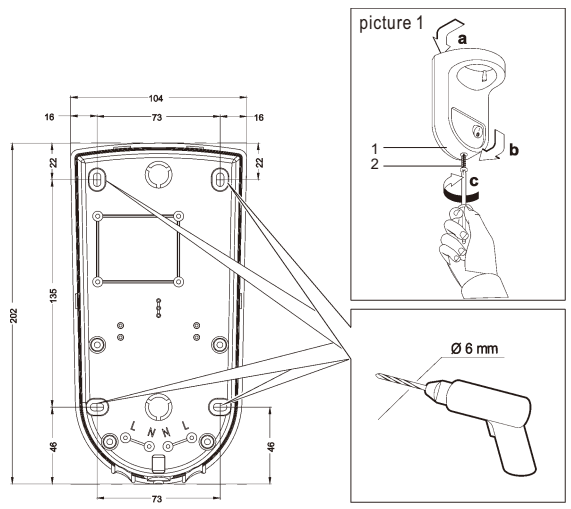

001 002 003

All measures are in mm



picture 2

140mm

95mm

2

•Allow your appliance to cool before storing away and do not wrap the supply cord around the hairdryer in storage.

INSTALLATION INSTRUCTIONS

Wall holder model 001/002

Standard model with on/off switch

Model 003

Model with universal shaver socket and hairdryer on/off switch. A safety transformer insulates the shaver socket from the mains and a protection device inhibits the operation of appliances with aload higher than 20VA.

Installation of wall holder

This work should only be carried out by a suitably qualified electrical engineer, in order to comply with the existing national safety regulations. When the spiral cord is extended to its maximum length, the hairdryer shall not be reached by a person using the bath or the shower.

Attention: before installing the hairdryer

always switch off the general switch

of your mains electricity.

1. Separate the cover (1) of the wall holder from the back plate by loosening the screw (2) according to the picture 1.

2. Plese bore four holes with 6mm'diameter according to the picture 2.

3

3.Put the toggle inside the holes and tighten the screws.

4. Secure the front cover with the screw (2).

5. Switch on the general switch of your mains electricity. The hairdryer is ready for use.

INSTRUCTIONS FOR USE

Control Switches

Control switch on wall holder 0-1 = Off/On

Hairdryer

Pushbutton:

ON=On/Off (pressure must be maintained to operate the hairdryer)

C = Low air temperature

1 = Medium air temperature

2 = High air temperature

5

SSEMBLY AND OPERATING INSTRUCTIONS

Read these instructions thoroughly.

CAUTION

•For additional protection, the installation of a residual current device (RCD)having a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

•Make sure the electrical system is fitted with a device which guarantees omnipolar disconnection from the electricity mains under category III overvoltage conditions.

•Make sure the unit is perfectly dry before using it.

•WARNING: Do not use this appliance near bathtubs, showers,basins or other vessels containing water.

•This hairdryer must be fixed so that a person taking a bath or shower cannot reach the handle, considering the cord at maximum extension.

•This appliance can be used by children from 8 years of age and over,and by persons with limited physical, sensory or mental abilities or who lack the relevant experience and knowledge, if they are suitably supervised or have been educated to use the appliance safely and made aware of the associated risks.

6

•Do not allow children to play with the appliance.

•Children must not perform cleaning and maintenance procedures unless supervised.

•Do not use your unit if it is not working properly. Do not try to repair this electrical unit yourself, rather contact an authorized technician. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.

•Plug the hairdryer into an alternating current outlet only, and make sure that the voltage of your electricity supply is the same as that indicated on the rating plate of the appliance.

•Do not immerse in water or other liquids.

•Never put the appliance in a place where it could fall into water or in other liquids.

•Do not try to salvage an electrical appliance which has fallen into water.

•Turn the unit off when you put it down.

•Unplug the appliance when not in use, but never do it by pulling the cord.

•Remember to check regularly that the air inlet and outlet grills are clean.

4

PRODUCT CARE

When not in use, the mains switch on the wall holder should be in the "Off" position. The hairdryer requires no special care or attention.

You can clean your appliance with a cloth dampened with water. The cleaning of hairdryers with detergents, solvents, alcohol and other chemical products is strictly prohibited.

When necessary, the air inlet grill should be cleaned with a soft brush or by vacuum cleaner.

The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.